

- Turn off electrical power at the fuse or circuit breaker box before wiring the PIR Motion sensor.

