




1. Remove the nut and spacer from the sensor.

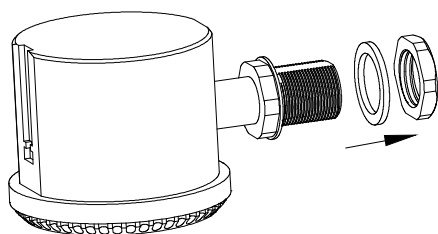


2. Installing the mounting kit on the sensor, and securing with nut.

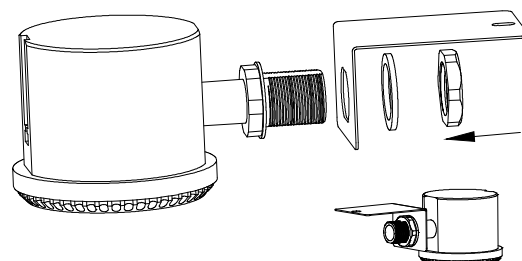



3. Loose the screws and open the junction box, then remove the knock hole.

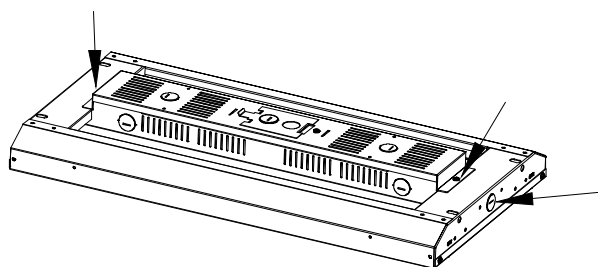

4. Put the sensor into the knock hole.

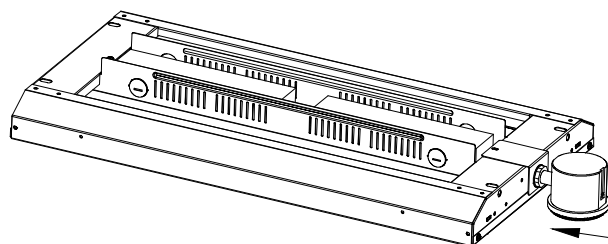

5. Connecting wires as picture shows.

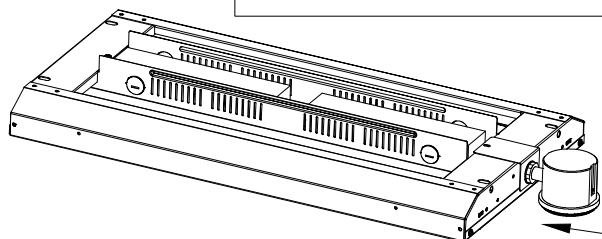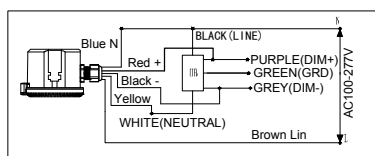

6. Again, checking the junction box and sensor are secured with screws, then completed.

