

Wiring Instructions for 8" and 12" T9 LED ballast bypass Type B circline lamps Models: S16500, S16501, S16502, S16503, S16504, S16505

Warning: Make sure the circuit breaker that supplies power to the fixture is turned off.

Step 1: If reusing socket from existing ballast most match the two sets of color wires (usually, it is Red, Yellow or Blue cables.

Step 2: As per Image Connect the two Red cables from the socket to the AC Input circuit load (L) Left side top and bottom pins and the two blue or yellow cables from the socket to the AC Input circuit Neutral N (L1) Right side Top and bottom pins.

Step 3: Apply the re-lamping label on a visible location inside the fixture housing.

Step 4: Install the New Led lamp to the fixture.

Step 5: Turn Power on at the circuit breaker panel and turn on the lights.

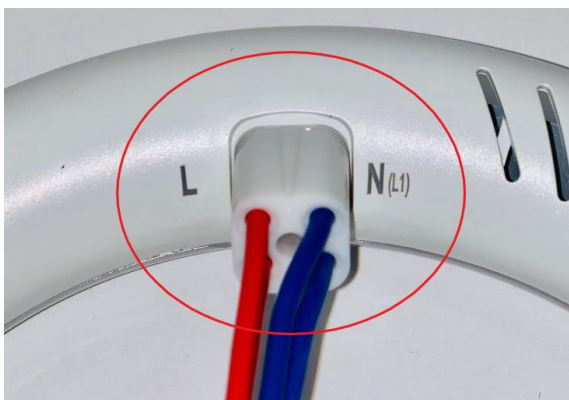


Image is for reference only

