

# SURFACE MOUNT KIT

Model: 65-1611, 65-1612, 65-1613



## INSTALLATION AND SAFETY INSTRUCTIONS





**IMPORTANT: Read before installing fixture. Retain for future reference.**

### WARNING: Risk of Fire or Electric Shock.

- Disconnect power before installation or maintenance.
- Only an authorized, licensed electrician should perform installation. Any improper installation might cause failure, electric shock, fire or other injury, damage or hazard.
- Choose suitable location, ensuring there are no cables, joists, or pipe-work in place, and mark fixed positions on the ceiling.


**IMPORTANT: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.**

### Accessories List


Bracket		4
Connector		4
Expansion Tube		8
Screw		16

### 2 X 4 INSTALLATION:


1. Install the four brackets on four corners.

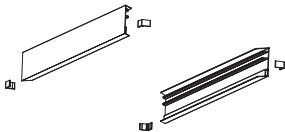


2. Install the three frames.




3. Install the screws on one side.

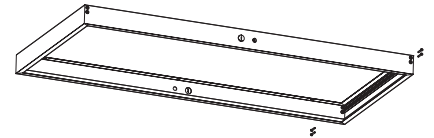


4. Secure the frames to the ceiling using 8 screws.




5. Remove the frame on the other side.



6. Fix the final side to the frame.




7. Secure the final side screws.

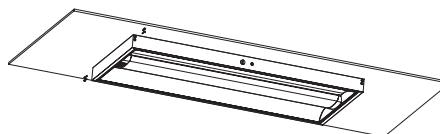


## 2 X 2 INSTALLATION:


1. Install the four brackets on four corners.

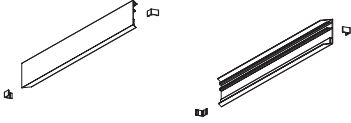


2. Install the three frames.

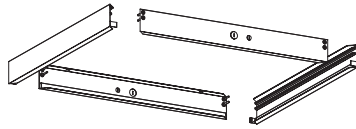


3. Install the screws on one side.

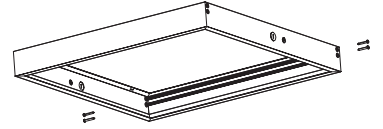


4. Secure the frames to the ceiling using 4 screws.

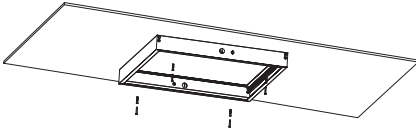


5. Remove the frame on the other side.



6. Fix the final side to the frame.



7. Secure the final side screws.

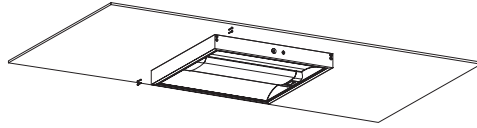

---

## 1 X 4 INSTALLATION:


1. Install the four brackets on four corners.




2. Install the three frames.




3. Install the screws on one side.

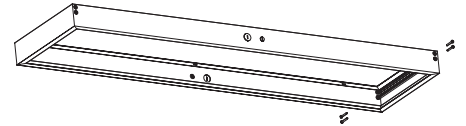

4. Secure the frames to the ceiling using 8 screws.

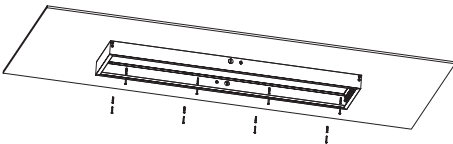

5. Remove the frame on the other side.

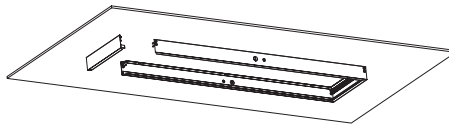

6. Fix the final side to the frame.



7. Secure the final side screws.

