

# Installation Instructions for UFO High Bay Pendant Adapter



Model Number 65/180


3/8" to 3/4" NPT Adapter.

Step 1:



Step 2:

Install the UFO High Bay Pendant Adapter Using Provided Bolt, Washer and Lock Washer.

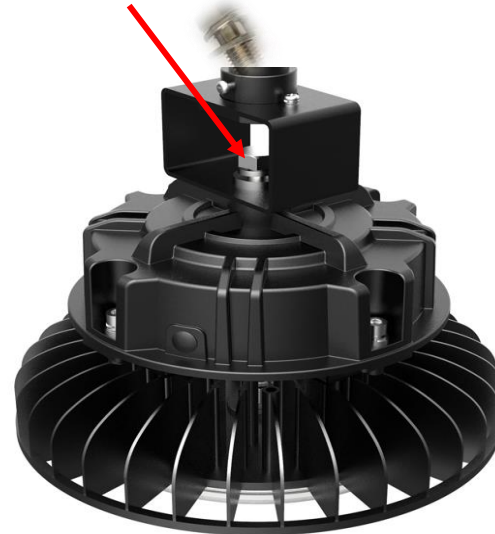

Step 3:

Secure Down 3/4" NTP Rod (**Not Included**) to Pendant Adapter Using Provided Machine Screw on Collar.

