

SATCO 90-483 MOGUL BASE RECEPTACLE INSTALLATION INSTRUCTIONS

TO BE INSTALLED AND/OR USED IN ACCORDANCE WITH
APPROPRIATE ELECTRICAL CODES AND REGULATIONS

**1. WARNING: TO AVOID FIRE, SHOCK,
AND DEATH; TURN OFF POWER AT
CIRCUIT BREAKER OR FUSE. TEST
THAT POWER IS OFF BEFORE WIRING.**

Use this device only with copper or copper clad wire. With aluminum wire use only devices marked CO/ALR.

2. For 3 1/4" Standard outlet box mounting, carefully remove KNOCK-OUTS on base of porcelain. (not necessary when mounting on a 4" box) See **figure 1**.

3. Inspect circuit wires. If frayed or uneven, cut off damaged ends and remove insulation to 3/4" copper wire.

4. Connect wires as follows:

Loop wires clockwise 3/4 turn around terminal screws. Tighten all screws firmly. Top wire terminals accept up to #10 copper or copper clad wire.

5. Supplied with two 8/32 screws and one eyelet hook screw with nut. See **figure 2**.

Mounting Instructions: For lamps with safety cable, use supplied eyelet hook screw, nut and 8/32 screw to secure to outlet box. See **figure 3**.

6. Restore power at circuit breaker or fuse.

Specifications

- 1500W
- 600V
- Maximum bulb weight 5 lbs.

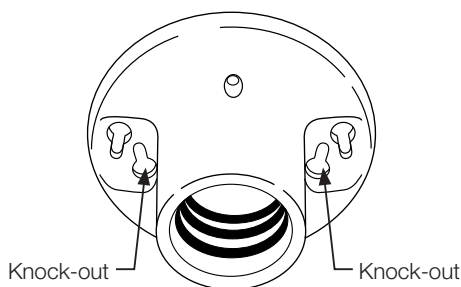


Figure 1

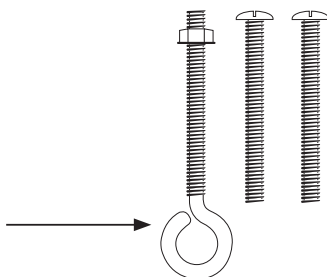


Figure 2



Figure 3