

Cleaning

- Clean with a soft or damp cloth. While cleaning with the damp cloth make sure the power is off.
- Do not clean with liquids or abrasives.

5 Year limited warranty

The purchased product is covered with a 5 year warranty in respect of any defect in material or workmanship after purchase date.

Satco shall bear no responsibility on account of guarantee, as well as shall bear no liability for any faults, in case of improper operation, use negligence, accident or exposure to natural hazard, or excessive use over the limits specified for the unit, or if any unauthorized alteration or repair followed.

Safety and Installation Instructions

Disk Light: 7" & 10"

with integrated occupancy sensor



Thank you for purchasing our product. This fixture has been manufactured from components with advanced optoelectronics to ensure high reliability and long life. Before assembling please read this Operation Manual carefully and save in a safe place for future reference. Please note that all electrical connections must be in accordance with local and National Electrical Code standards as well as local building codes. In case you are not familiar with proper wiring connections and building codes, consult a qualified electrician.

Safety recommendations

1. Risk of electric shock – this product must be installed in accordance with applicable installation codes by a person familiar with mentioned above codes and hazards involved. disconnect power at circuit breaker or fuse before installing or servicing.
2. Before use of the product carefully read the whole operation manual.
3. The product is purposed for interior use only, suitable for damp locations.
4. Luminaire is suitable for installation within a clothes closet storage space.
5. Protect the product against direct contact with water.
6. Assemble the product only with the use of parts provided and the housing; improper assembly may result in device failing which could damage the product, personal property or cause injury.
7. Assembly shall follow with accessories delivered with the set only.
8. The device is not a toy, keep out of reach of children.


Specifications:

Disk Light

Operating Voltage: 120VAC


Power consumption: 16.5W / 21.5W

Life span: 50,000h

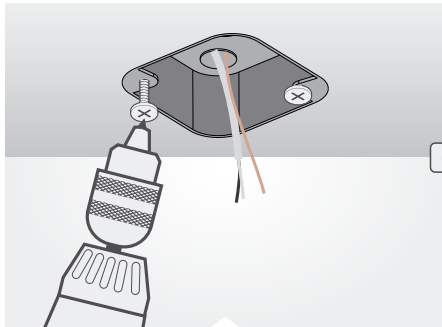


STEP 1a: For 4" Jbox, 7" fixture can be installed to Jbox directly without crossbar. For 2.75" Jbox, 10" fixture can be installed to Jbox directly without crossbar.

OR

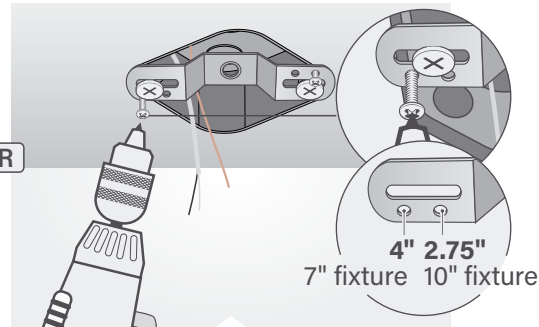


STEP 1b: Attach bracket to jbox using 2 screws (provided). 1. For 2.75" and 3" Jbox, install 7" fixture by attaching 2 long screws to 4" holes of crossbar according to marking. 2. For 3" and 4" Jbox, install 10" fixture by attaching 2 long screws to 2.75" holes of crossbar according to marking.

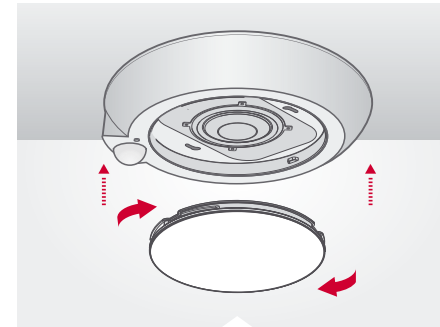


STEP 7: Align two tabs on inside wall of light base to threads on acrylic lens. Turn CLOCKWISE until lens locks in place.




STEP 8: Fixture installed.

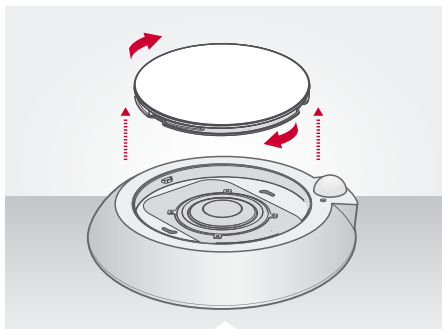

STEP 2: Remove acrylic lens from base by turning counter clockwise. Remove sticker.

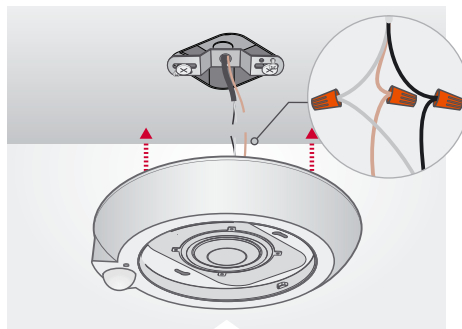

STEP 3: Connect wires to AC cables from junction box with wire nuts (provided): L side to Black AC wire N side to White AC wire. Ground to Ground wire

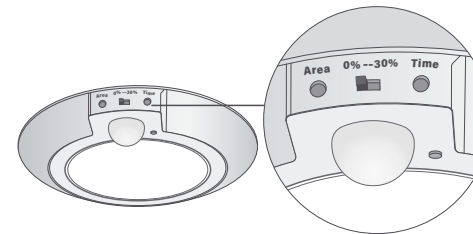

Area 0% --30% **Time**
max. 20ft 0- 5 mins.

**There are 3 sensor settings on the side.
Use a flat screwdriver to adjust.**



max. 20ft

① Area

Sensor activation area can be set for a diameter of 0ft to a maximum of 20ft



Night time

② 0 % or 30%


The fixture can be set at default brightness of 0 (not lit in OFF condition) or 30% (maintain 30% of full output in OFF condition)




0-5mins

③ Time

Time options from 0 to 5 minutes for ON time after activation.

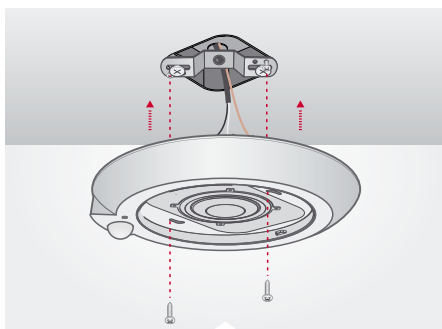

STEP 5: Carefully push and feed all wires back in to the Jbox. Align the two mounting holes on the fixture body to the two long screws of the crossbar.

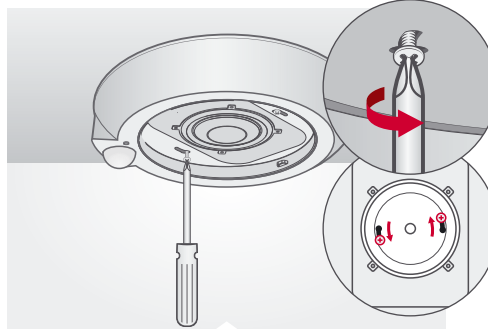

STEP 6: Twist clockwise and push to lock fixture in place. Secure base to crossbar by tightening two screws. For wet location usage, please caulk the edge of fixture with glue to ceiling.