

RC-100

Sensor Remote Programmer

OPERATION INSTRUCTIONS

SPECIFICATIONS

Power supply	2 x AAA 1.5V battery, Alkaline preferred
Carrying case	RC-100 in carrying case
Upload range	Up to 15 m (50 ft.)
Op. temperature	0°C~50°C (32°F~122°F)
Dimensions	123 x 70 x 20,3 mm (4. 84" x 2.76" x 0. 8")



WARNING

Remove the batteries from compartment if the remote will not be used in 30 days.

OVERVIEW

The remote control Wireless IR Configuration Tool is a handheld tool for remote configuration of IR-enabled fixture integrated sensors. The tool enables device to modify via pushbutton without ladders or tools, and stores up to four sensor parameter modes to speed configuration of multiple sensors.

The remote control uses bidirectional IR communication to send and receive sensor settings at mounting height up to 50 feet. The device can display previously established sensor parameters, copy parameters and send new parameters or store parameter profiles. For projects where identical settings may be desired across a large number of areas or spaces, this capability provides a streamlined method of configuration. Settings can be copied throughout a site, or in different sites.

LED INDICATORS

LED	DESCRIPTION	LED	DESCRIPTION
BRIGHTNESS	High end trim turning function(To Set the output level of connected lighting during occupancy)		To select the current surrounding lux value as the daylight threshold. This feature enables the fixture to function well in any real application circumstances.
SENSITIVITY	To set the occupancy sensing sensitivity of the Sensor		The daylight sensor stops working, and all motion detected could turn on the lighting fixture, no matter how bright the natural light is.
HOLD TIME	The time that the Sensor will turn off(if you choose stand-by level is 0) or dim the light to a low level after the area is vacated	STAND-BY DIM	To set the output level of connected lighting during vacancy. The sensor will regulate the lighting output at the set level. Setting the STAND-BY DIM level at 0 means light full off during vacancy.
DAYLIGHT SENSOR	To represents various thresholds of natural light level for the Sensor .	STAND-BY TIME	To represents the time that the Sensor will keep the light at low dim level after the HOLD TIME elapsed.

BUTTON OPERATION

BUTTON	DESCRIPTION	BUTTON	DESCRIPTION
	Press the button, the light goes to permanent on or permanent off mode, and the sensor is disabled. (MUST press button to quit this mode for Setting.		Press button, the sensor starts to function and all settings remain the same as the latest status before the light is switched on/off.
	Display the current/lastest setting parameters in LED indicators(the LED indicators will on for showing the setting parameters).		The button is for testing purpose sensitivity only. after you choose sensitivity thresholds, then you press button, The sensor goes to test mode(hold time is only 2s) automatically ,meanwhile the stand-by period and daylight sensor are disabled. Press button to quit from this mode.
	Press button, all settings go back to settings of dip Switch in sensor.		
	Enter in the setting condition, the parameter leds of remote control will flash to be selected. and Navigate to UP and Down for choose selected parameters in LED indicators.		Navigate to LEFT and RIGHT for choose selected parameters in LED indicators.
	Confirm the selected parameters selected parameters in remote control.		Open and close smart daylight Sensor. Press or Enter in the setting condition, the parameter leds of remote control will flash to be selected, Press for open or close smart daylight Sensor.
	Press button, upload the current parameters to sensor(s), the led light which the sensor connects will on/off as confirm.		
	4 Scene modes with preset parameters which are available to be changed and saved in modes.		

SETTING

The SETTING Content contains all available settings and parameters for remote sensors. It allows you to change the available control, parameters, and operation of the sensor from factory default or current parameters.

Change multiple settings of sensor(s)

1.Press button, the remote control leds will show the latest parameters you set.

NOTE: if you push before, you must push button to unlock the sensor.

2.Press or enter in the setting condition, the parameter leds of remote control will flash to be selected, navigate to the desired setting by pressing to select the new parameters.

3.Press ok to confirm all setting and saving.

4.Aim at the target sensor and press to upload the new parameter, the led light which the sensor connects will on/off as confirm.

NOTE: the setting works key step is by Push or , enter in the setting condition.


NOTE: the led light which the sensor connects will on/off after getting the new parameter as confirm.

NOTE: If you press button, the remote led indicators will show the latest parameters which were sent.

1. Press **(DISP)**, the remote led indicators will show the latest parameters.
2. Press **(▲)** or **(▼)** enter in the setting condition, the parameter Led indicators of remote control will flash to be selected.
3. Press **(□)**, 2 led indicators will flash in daylight sensor settings, select daylight **(10)** **(30)** **(50)** as setpoint to light on Automatically, select daylight **(100)** **(300)** **(500)** as setpoint to light off Automatically.
4. Press **(OK)** to confirm all setting and saving.
5. Aim at the target sensor and press **(SEND)** to upload the new parameter. The led light which the sensor connects will on/off.

1. Open or close the smart daylight sensor by push  when remote control is in setting condition.
2. When the smart daylight sensor open, 2 Led indicators are flash in daylight sensor setting.
select daylight    as setpoint to light on Automatically, select daylight    as setpoint to light off automatically. When smart daylight sensor close, 1 Led indicator is flash in the daylight sensor setting for choose daylight sensor threshold.
3. When the smart daylight sensor open, the stand-by time is only .
4. Smart daylight sensor takes place of normal photocell sensor and works independently.
5. See **Daylight Sensor Function**.

This function inside the motion sensor to achieve tri-level control, for some areas which require a light change notice before switch-off. The sensor offers 3 levels of light: 100%-->dimmed light (natural light is insufficient)-->off; and 2 periods of selectable waiting time: motion hold-time and stand-by period; Selectable daylight threshold and freedom of detection area.

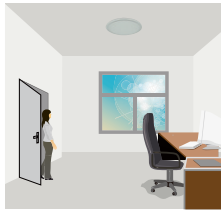

A 3D-style illustration of a person with dark hair, wearing a white shirt and grey trousers, standing in a doorway. They are looking into a room. Inside the room, there is a desk with a computer monitor, a black office chair, and a window with a blue sky view. A circular light fixture is on the ceiling.

A 3D rendering of a modern office interior. The room has light gray walls and a white ceiling with a circular recessed light. On the left wall, there is a large round clock showing approximately 1:50. A white door is slightly ajar on the left. In the center, a large window looks out onto a bright blue sky. To the right, a wooden desk holds a white computer monitor and some papers. A black ergonomic office chair is positioned in front of the desk.

Open the daylight sensor by push (II) when remote control is in setting condition.


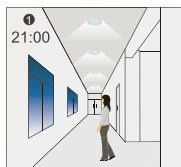


Diagram of a hallway with a blue wall and a door. The hallway is long and narrow, with a blue wall on the left and a white wall on the right. A door is visible at the end of the hallway. The time 21:40 is displayed in the top left corner.

Settings on this demonstration:
 Hold-time: 30min
 setpoint to light on: 50lux
 setpoint to light off: 300lux
 Stand-by Dim: 10%
 Stand-by period: ∞
 (when the smart photocell sensor open, the stand-by
 time is only ∞)

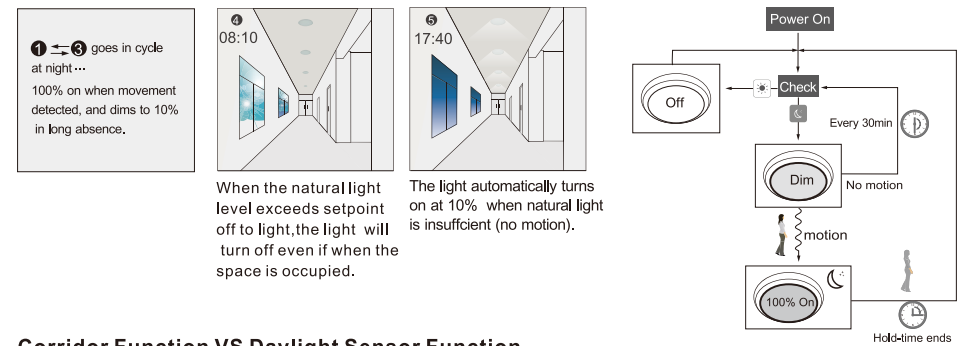

1. In corridor function, turn on the light **MUST** by natural light level lower daylight sensor setting and Occupancy. In smart daylight sensor function, turn on the light by natural light level lower daylight setpoint to light on even if vacancy.
2. In corridor function, turn off light by stand-by time finish if vacancy. In smart daylight sensor function, turn off the light by natural light level higher than daylight setpoint to light off even if occupancy.
3. In smart daylight sensor function, natural light level lighter/lower than daylight setpoint to light off/on **MUST** keep at least 1mintue, that will turn off/on the light automatically.

The remote control comes with 4 Scene MODES which are not default. You may make desired parameters and save as the new MODE(1,2,3,4) to configure the installed sensors.

SCENE MODES(1 2 3 4)

Application	Scene Options	Brightness	Detection Area	Hold Time	Stand-by Time	Stand-by Dim Level	Daylight Sensor
Indoor	Mode 1	100%	75%	5min	30min	30%	
Indoor	Mode 2	100%	75%	1min	+∞	30%	
Indoor	Mode 3	100%	75%	5min	30min	30%	30LUX
Outdoor	Mode 4	100%	75%	1min	+∞	30%	 (30LUX/300LUX)

- 1.press  /  /  /  button,the remote control Led indicators show existing parameters.
- 2.press     to select the new parameters.
- 3.Press  to confirm all parameters and saving in the mode.

The upload function allows you to configure the sensor with all parameters in one operation. You may select CURRENT SETTING parameters or the MODE for uploading. Current setting parameters or the MODE are displayed in Remote control .

1. Press **(DISP)** button or press **(MODE1)** / **(MODE2)** / **(MODE3)** / **(MODE4)**, all parameters are displayed in Remote control.

Note: check if all parameters are correct , if not, change them.

2.Aim at the sensor and press **(SEND)** button , the light that sensor connects will be on/off as confirm.

Note: if other sensor need same parameters, just aim at the sensor and press button.